

# FP 1.150

## DIAPHRAGM LIQUID PUMP



FP 1.150



FP 1.150



FP 1.150


### ADVANTAGES

- Low pulsation
- Excellent linearity
- Self-priming and can run dry
- Gentle conveying of sensitive media
- Long lifetime, no maintenance
- Able to transfer aggressive media
- IP 65

### POSSIBLE AREAS OF USE

- Inkjet printing
- Medical technology
- Laboratory technology
- Fuel cells
- Semiconductor industry
- And many more

Please visit our website  
[www.knf.com](http://www.knf.com)  
 to get more information.

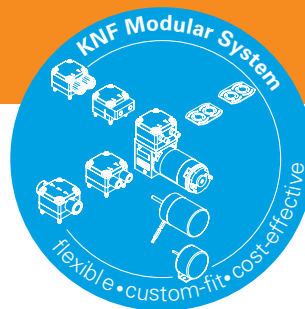

### PERFORMANCE DATA

Series model	FP 1.150	
Material options	KP	KT
Pump head	PP	PP
Diaphragm	PTFE coated	PTFE coated
Valves / O-rings	EPDM	FFKM / FKM
Flow rate (l/min)	1.1	1.0
Suction height (mH <sub>2</sub> O)	2.3	2.0
Pressure head (mH <sub>2</sub> O)	60	60
Permissible media temperature (°C)	5 - 80	5 - 80
Permissible ambient temperature (°C)	5 - 40	5 - 40
Protection factor	IP 65	IP 65
Weight (kg)	0.8	0.8

### ELECTRICAL DATA

Voltage (V)	24	24
Motor	DCB-4*	DCB-4*
Power (W) start at 5°C ambient	33.6	33.6
I (A) start at 5°C ambient	1.4	1.4
I (A) start at 25°C ambient	1.1	1.1
Wires	AWG22	AWG22
Input signal	Vctrl / PWM inverse	Vctrl / PWM inverse
Input signal range Vctrl	0...5 V	0...5 V
Input signal range PWM inverse	100%...0%	100%...0%

### CUSTOMIZED PERFORMANCE ON REQUEST

Flow rate up to (l/min)	1.4
Suction height up to (mH <sub>2</sub> O)	3
Pressure head up to (mH <sub>2</sub> O)	60

\*DCB = Stands for brushless DC motor

# FP 1.150 KPDCB-4


## PERFORMANCE DATA

Series model	Flow rate at atm. pressure (l/min)	Max. suction height (mH <sub>2</sub> O)	Max. pressure head (mH <sub>2</sub> O)
FP 1.150 KPDCB-4	1.1	2.3	60

## VARIOUS

Dimensions LxWxH (mm)	Hydraulic connections	Hose diameter recommendation (mm)
139x94x77	G 1/8"	ID 8

## FP 1.150 KPDCB-4

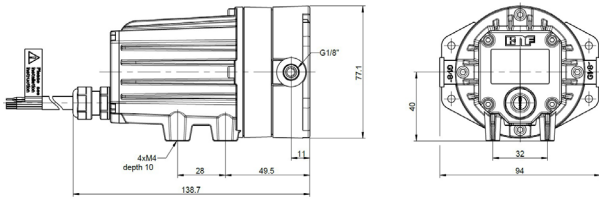

Dimensions in mm

# FP 1.150 KTDCB-4


## PERFORMANCE DATA

Series model	Flow rate at atm. pressure (l/min)	Max. suction height (mH <sub>2</sub> O)	Max. pressure head (mH <sub>2</sub> O)
FP 1.150 KTDCB-4	1.0	2.0	60

## VARIOUS


Dimensions LxWxH (mm)	Hydraulic connections	Hose diameter recommendation (mm)
139x94x77	G 1/8"	ID 8

## FP 1.150 KTDCB-4

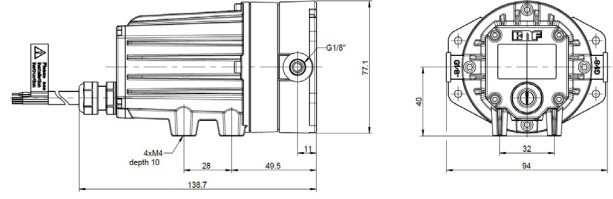


Dimensions in mm


## FP 1.150 KPDCB-4 FLOW RATE

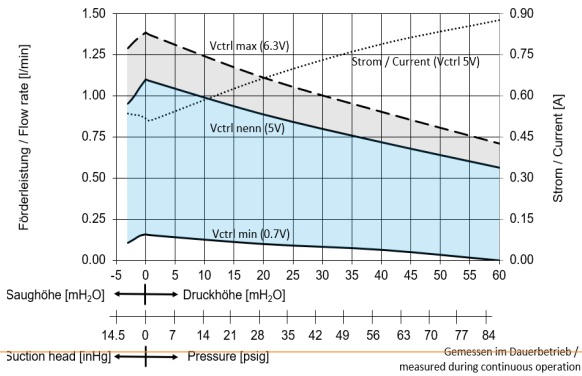


## FP 1.150 KTDCB-4 FLOW RATE

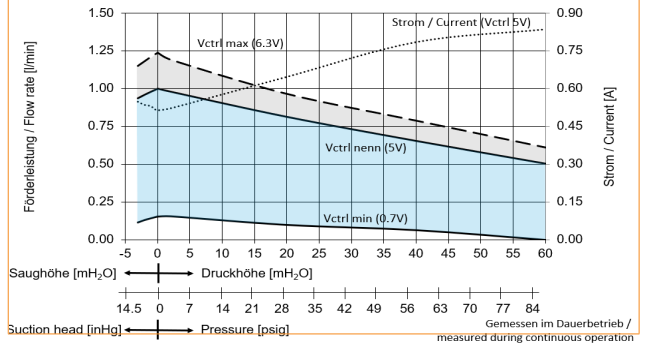


## FP 1.150 KPDCB-4 CONTROL VOLTAGE

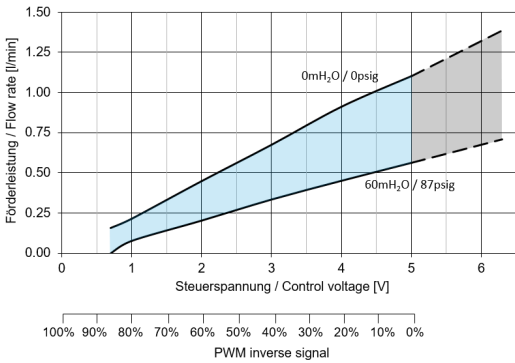

## FP 1.150 KTDCB-4 CONTROL VOLTAGE

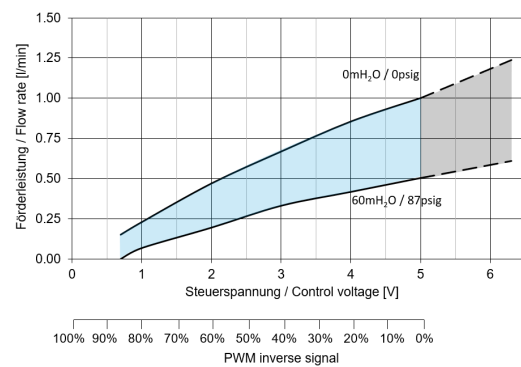

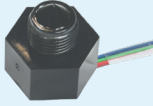



OPTIONS		
Description	Illustration	Details
Leakage sensor		The liquid level sensor provides a digital output that denotes the presence of liquid in the motor housing.



### NSF National Sanitary Foundation

This certification will confirm that all of the pumps with the code .51 are certified for the use with foods/consumables.

ACCESSORIES		
Description	Illustration	Details
Pulsation damper	 KP: 068890/324038 KT: 068891/324038	This versatile pulsation damper reduces hydraulic pressure pulsations and vibrations in hoses and pipes. It helps to remove pulsation which prevents the system from functioning correctly. It also protects instrumentation connected after the pump.
Mounting plate	 178997	Enabling additional mounting options. Screws included in the set.
Mounting clamp	 177811	Additional fixing possibility by means of a pipe clamp on the pump.
Compression fitting	 175454	Connection for flexible tubes suitable for higher pressures. Connection: DN08/10 Material: PP O-Ring: FKM Thread: G1/8"

The performance values for the series models shown on this data sheet were determined under test conditions. The actual performance values may differ and depend in particular on the usage conditions and therefore on the specific application, on the parameters of the components involved in the user's system and on any technical modifications carried out which deviate from the standard configuration or the as delivered condition.

If individual designs have been created for specific customers on the basis of series models, other technical performance data may apply. Before operation begins, the relevant operating instructions and/or assembly or installation instructions should be read and the safety information contained in these instructions should be noted. KNF reserves the right to make changes to the product and the associated documentation without prior notice to the customer



[www.knf.com](http://www.knf.com)