

# NMP830 HP SERIES MICRO DIAPHRAGM GAS PUMPS





#### **ADVANTAGES**

- Uncontaminated flow
- Customizing available
- Maintenance-free
- Long product life
- High pneumatic performance
- Compact size/high power density
- Can operate in any installed position

- High condensate resistance
- FDA approved wetted material



Please visit our website www.knf.com to get more information.

#### POSSIBLE AREAS OF USE

- Medical
- Reprographic
- Environment
- Security
- Food


PERFORMANCE DATA					
Series model	NMP830 HP				
Material design	KPDC		KPDC-BI4		
Pump head	PPS				
Diaphragm	EPDM (FKM and PTFE on request)				
Valves/Sealing	EPDM (FKM and FFKM on request)				
Flow rate at atm. pressure (I/min)	5		5		
Ultimate vacuum (mbar abs.)	230	230		230	
Ultimate pressure (bar rel)	3		3		
Permissible media and ambient temperature (° C/° F)	+5° C to +40° C / 41° F to 104° F (extended temperature on request)				
Weight (g/oz)	185/6.53		175/6.17		
ELECTRICAL DATA					
Voltage (V)	12	24	12	24	
Motor	DC		Integrated brushless DC, 4 wire (2 wires on request)		
I <sub>max</sub> (A)	0.9	0.5	1.00	0.65	


### NMP830KPDC HP


PERFORMANCE DATA				
Series model	Flow rate at atm. pressure (I/min)	Max. operating pressure (bar rel)	Ultimate vacuum (mbar abs.)	
NMP830KPDC HP 12V	5	3	230	
NMP830KPDC HP 24V	5	3	230	


## NMP830KPDC-BI4 HP


PERFORMANCE DATA				
Series model	Flow rate at atm. pressure (I/min)	Max. operating pressure (bar rel)	Ultimate vacuum (mbar abs.)	
NMP830KPDC-BI4 HP 12V	5	3	230	
NMP830KPDC-BI4 HP 24V	5	3	230	

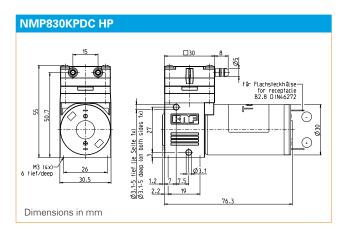


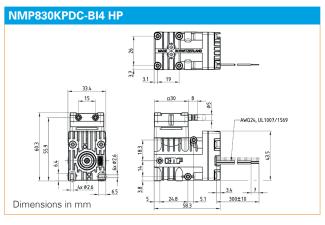

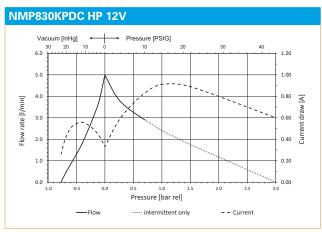

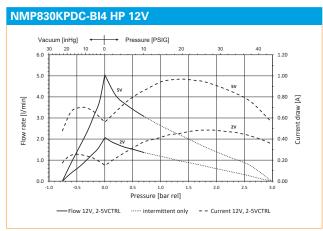

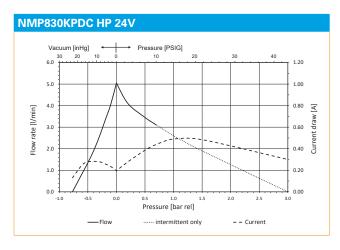

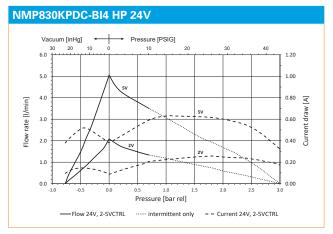

<b>OPTIONS</b>			
Description	Illustration	Part No.	Details
Motors			Other motor options are available. Ask your KNF sales contact to find the best solution for you.
Connecting plate			DN4/6 connecting plate M5 inside thread UNF ¼"- 28 inside thread
Eccentric			Other eccentricities are available to meet your operating point best.

ACCESSORIES			
Description	Illustration	Part No.	Details
Silencer	All Property of the Property o	338498	For hose barbs
Silencer		314005	For DN4/6 connecting plate
Mounting plate		164313	Hole distance 43x22mm. Inner diameter of the sleeve is 3.5 mm, screws are not included.
Rubber-bonded metal		On request	

SPARE PARTS			
Description	Illustration	Part No.	Details
Spare part kit NMP830 KP HP NMP830 KV HP NMP830 KT HP		317273 317274 317275	One Kit per head containing valve, O-ring and diaphragm. For a double head pump two kits are required.



#### **DIGITAL CUSTOMIZATION**

Thanks to digital technology, this pump can be quickly adapted to the customer's system. This is done by parametrizing the firmware of the integrated brushless motor at KNF.

The performance values for the series models shown on this data sheet were determined under test conditions. The actual performance values may differ and depend in particular on the usage conditions and therefore on the specific application, on the parameters of the components involved in the user's system and on any technical modifications carried out which deviate from the standard configuration or the as delivered condition.

If individual designs have been created for specific customers on the basis of series models, other technical performance data may apply.

Before operation begins, the relevant operating instructions and/or assembly or installation instructions should be read and the safety information contained in these instructions should be noted.

KNF reserves the right to make changes to the product and the associated documentation without prior notice to the customer.

